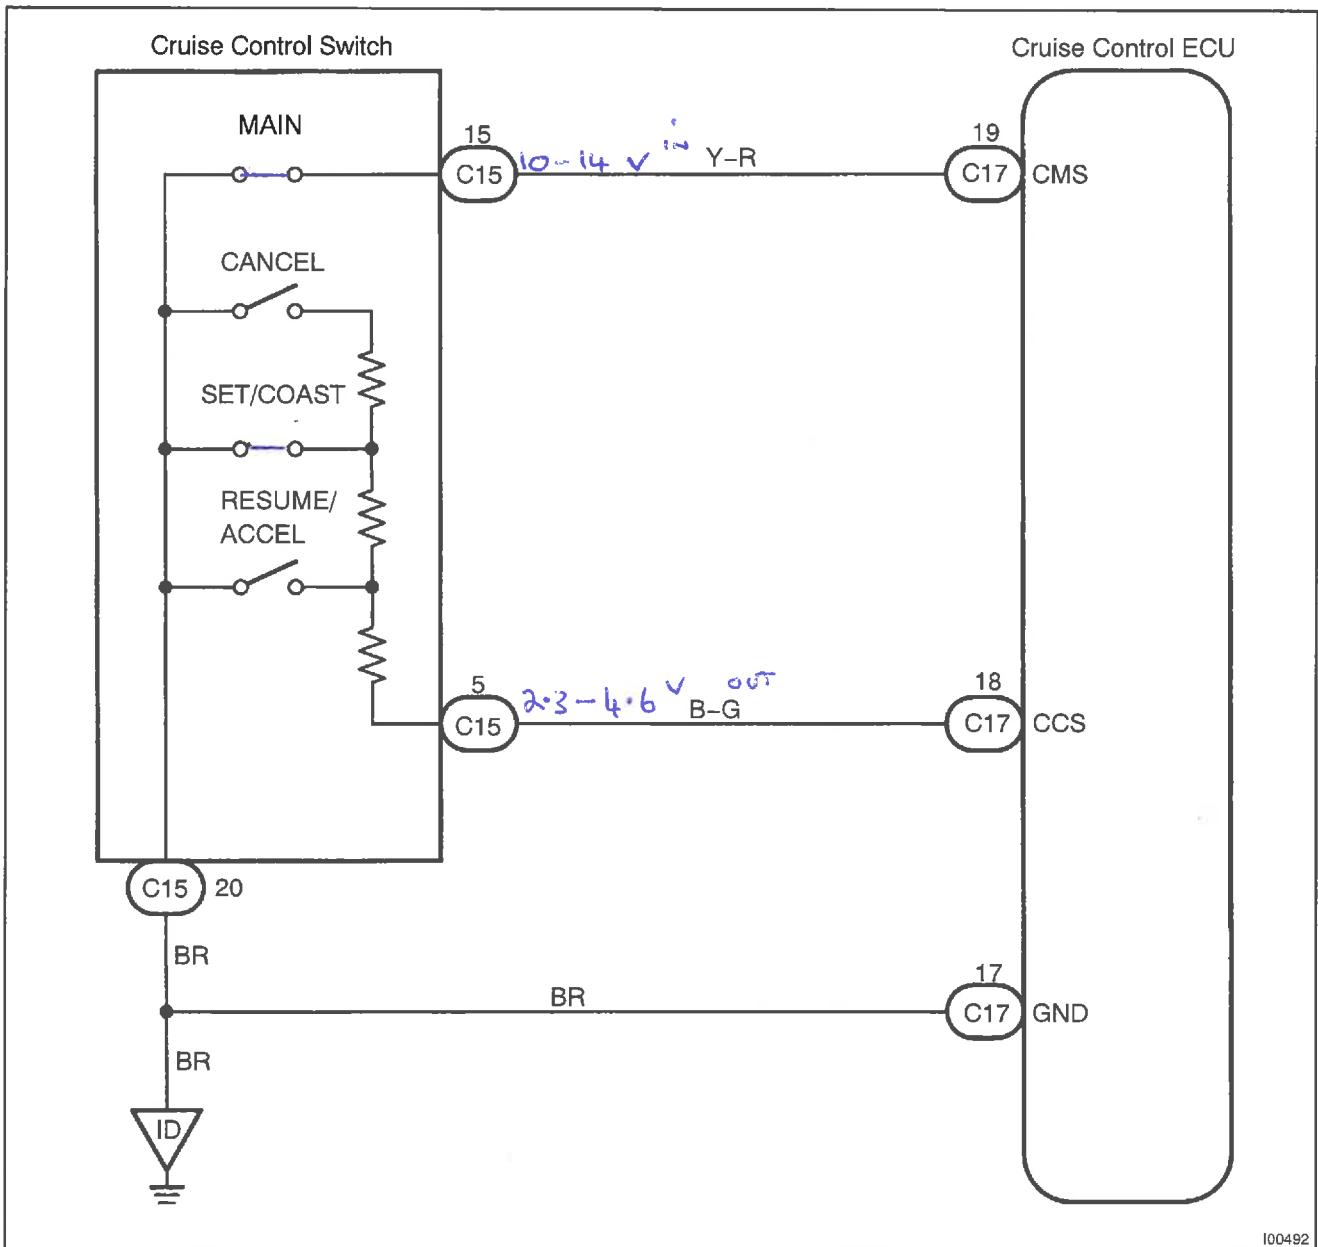


DTC**32****Control Switch Circuit
(Cruise Control Switch)****CIRCUIT DESCRIPTION**

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL signals (each voltage) to the ECU.

DTC No.	Detection Item	Trouble Area
32	• Short in control switch circuit.	<ul style="list-style-type: none"> • Cruise control switch • Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground • Cruise control ECU

WIRING DIAGRAM


DTC	32	Control Switch Circuit (Cruise Control Switch)
------------	-----------	---

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL signals (each voltage) to the ECU.

DTC No.	Detection Item	Trouble Area
32	• Short in control switch circuit.	<ul style="list-style-type: none"> • Cruise control switch • Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground • Cruise control ECU

WIRING DIAGRAM

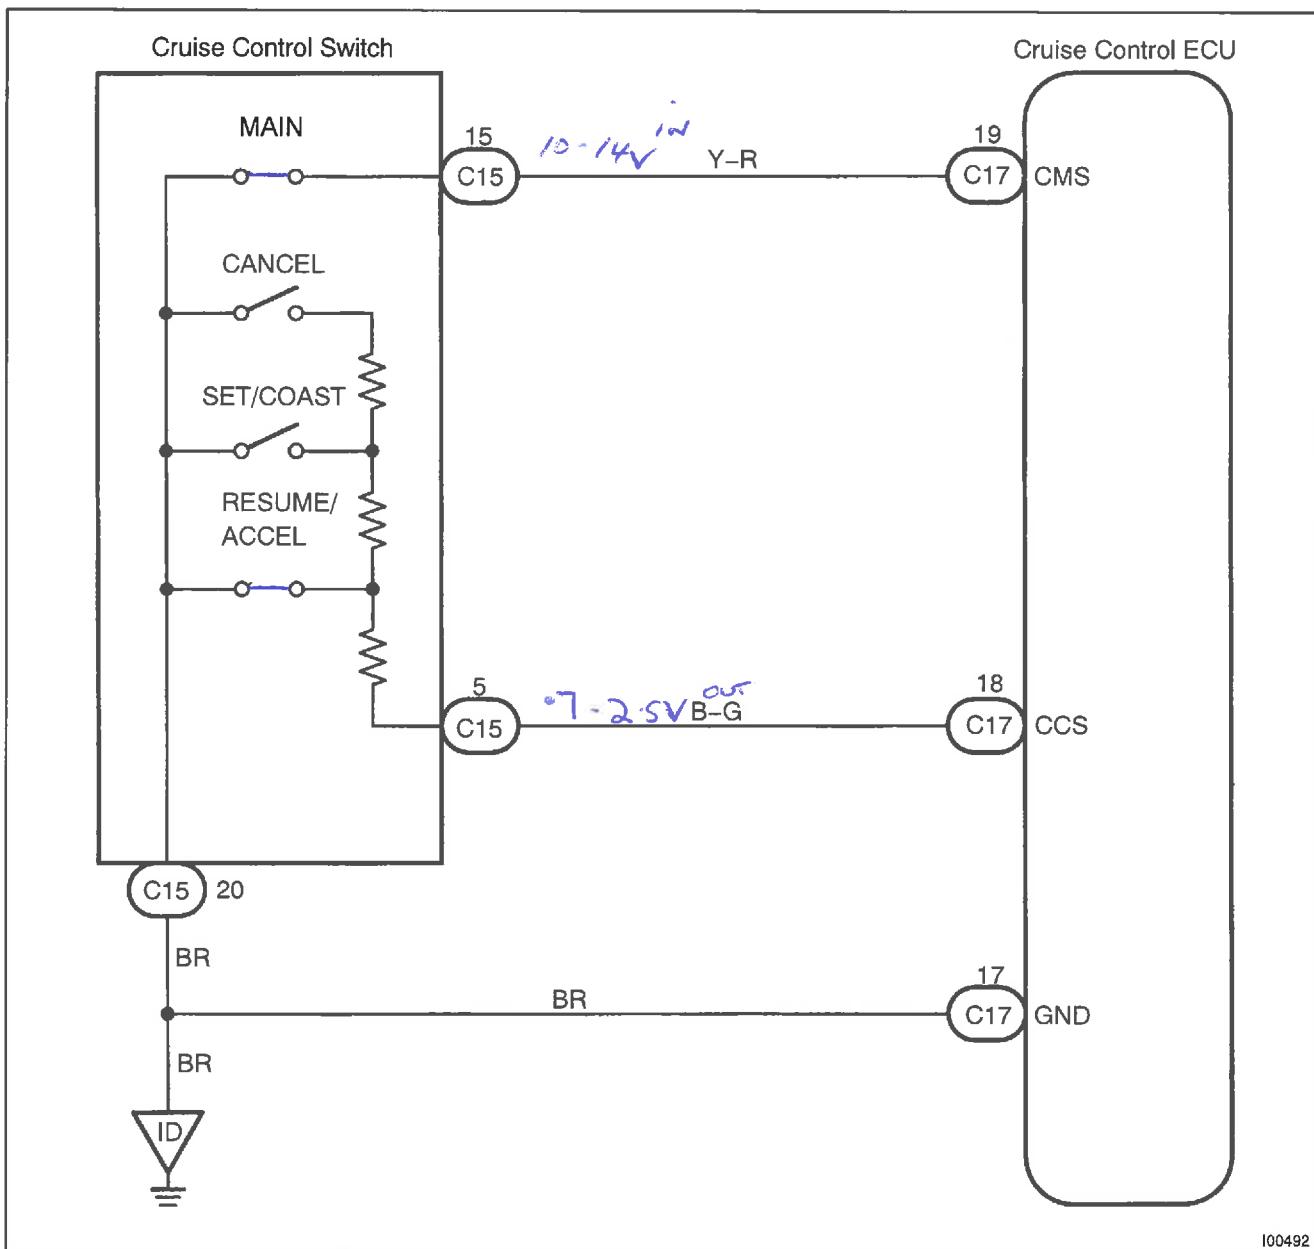

DTC	32	Control Switch Circuit (Cruise Control Switch)
------------	-----------	---

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL signals (each voltage) to the ECU.

DTC No.	Detection Item	Trouble Area
32	• Short in control switch circuit.	<ul style="list-style-type: none"> • Cruise control switch • Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground • Cruise control ECU

WIRING DIAGRAM

