

FANUC TAPE CUT-MODEL K, L, M, N

MAINTENANCE MANUAL

CONTENTS

I. PREFACE	1
1. GENERAL	1
1.1. External View	1
II. MACHINE MAINTENANCE	2
1. TABLE	2
1.1 Structure of Table	2
1.2 Guide Rail	2
1.3 Ball Screw	2
1.4 Adjustment of Machine Level	2
2. DIELECTRIC SYSTEM	6
2.1 Piping and Composition of the Dielectric System	6
2.2 Tank	9
2.3 Pump	9
2.4 Ion exchanger	11
2.5 Filter	11
2.6 Fuses and Thermal Relays for Pumps	17
2.7 Meter relay	18
2.8 Maintenance and Check and the Method of Re-sealing the Refrigerant	19
3. WIRE FEED SYSTEM	21
3.1 The Construction of the Wire Feed System	21
4. TROUBLESHOOTING	26
4.1 Table Related Items	26
4.2 Dielectric System	26
4.3 Wire Feed System	27
III. EXPLANATION FOR CONTROL UNIT	29
1. STRUCTURE AND CONSTRUCTION	29
1.1 Structure	29
1.2 Construction	32
1.3 Main Components	34

B - 54695E/01

© FANUC LTD, 1983