

Ashworth Series 2000 Speedy Moisture Tester

User Instructions

Models covered by this manual:

L2000C, L2000D, L2000G
S2000B, S2000C, S2000D

Contents	Page Number
Introduction and Product Familiarisation	1
Safety First!	1
Standard Size Speedy – Moisture Test Procedure	2
Large Size Speedy – Moisture Test Procedure	4
User Guidance Notes	6
Fault Diagnosis	7
Sample Preparation Table	7
Appendix	Calcium Carbide MSDS

Introduction and Product Familiarisation

The Series 2000 Speedy moisture tester is a portable system for measuring the moisture content of a wide range of materials including soils, aggregates, dust and powders (and liquids). The system consists of a rugged plastic case containing a low-pressure vessel fitted with a pressure gauge and an electronic scale and ancillaries.

Moisture measurements are made by mixing a weighed sample of the material with a reagent – calcium carbide – in the sealed pressure vessel. The reagent reacts chemically with water in the sample producing acetylene gas that in turn increases the pressure within the vessel. As the pressure increase in the vessel is proportional to the amount of water in the sample, the moisture content can be read directly from the calibrated pressure gauge.

The Series 2000 Speedy is available in two sizes with a choice of moisture measurement ranges as detailed below.

Part No.	Vessel Size	Measurement Range H ₂ O%W/W	Max. Recommended Particle Size	Sample Weight (g)
L2000C	Large	0 – 10	20mm	40g
L2000D	Large	0 – 20	20mm	20g
L2000G	Large	0 – 50	20mm	8g
S2000B	Standard	0 – 5	10mm	10g
S2000C	Standard	0 – 10	10mm	12g
S2000D	Standard	0 – 20	10mm	6g

Safety First

The calcium carbide reagent used with the Speedy tester is a hazardous product that must be handled with care by the user and with consideration for the environment. Users of the Speedy must be familiar with the Speedy Moisture Test Procedure detailed in this manual.

Users must also follow calcium carbide transportation, storage, handling and disposal guidelines in accordance with local regulations and/or the calcium carbide **Material Safety Data Sheet (MSDS)**. Users should be familiar with the hazard identification, first aid measures, fire-fighting measures, accidental release measures, personal protection measures, physical and chemical properties, stability and reactivity, toxicological information, and ecological information as given in the MSDS.

Standard Size Speedy – Moisture Test Procedure



The test procedure is simple to follow and takes a just few minutes for most materials. To ensure accurate and consistent results the procedure should be followed precisely.

- 1. Clean the Speedy Vessel.** Prior to using the speedy tester ensure that the inside of the Speedy cap and vessel are empty and clean. Use the bristle brush to remove any residues from previous tests.



- 2. Select and prepare the sample.** Ensure that the sample to be weighed and placed in the Speedy is representative of the material that is under investigation. Some materials, such as free-flowing powders and sands, need no preparation whereas others may need to be ground prior to testing – please refer to the Sample Preparation Table for further information.

- 3. Weigh the sample.** Place the empty measuring beaker on the electronic scale and zero the scale (refer to the electronic balance user instructions for further details). Add small amounts of material from the sample until the correct sample weight is reached. The sample weight is determined by the size and measurement range of the Speedy that is being used as detailed below:



Part No.	Vessel Size	Measurement Range H ₂ O%W/W	Sample Weight (g)
S2000B	Standard	0 – 5	10g
S2000C	Standard	0 – 10	12g
S2000D	Standard	0 – 20	6g

- 4. Add the sample to the Speedy vessel.** Pour the sample into the chamber of the Speedy vessel as shown.



- 5. Add the reagent to the Speedy cap.** Using the metal scoop, add a minimum of two full scoops of reagent to the Speedy cap cavity as shown.



- 6. Seal the Speedy.** Hold the Speedy horizontally and position the cap as shown. Swing the stirrup into position and tighten the top screw to seal.



- 7. Mix the sample with the reagent.** Hold the Speedy vertically with the pressure gauge facing the ground and shake vigorously for 5 seconds. Rotate the Speedy through 180° so that the pressure gauge faces the sky, tap the sides of the Speedy to ensure the sample falls into the cap cavity and prop or hold the Speedy in this position for 1 – 2 minutes.

8. **Take the reading.** Hold the Speedy horizontally and at eye level and take the moisture content reading directly from the pressure gauge.



9. **Release the pressure.** Hold the Speedy vertically with the pressure gauge facing the ground. Locate the arrow on the flange of the cap and point this away from yourself and other people in your vicinity. Unscrew the top screw slowly to vent the gas that may have been generated within the Speedy.



10. **Remove the sample and reagent.** Tip the contents of the Speedy directly into a clean and dry open container and dispose of in accordance with **Section 13** of the Calcium Carbide **Material Safety Data Sheet**.
11. **Clean the Speedy.** Clean the Speedy vessel and cap and measuring beaker in preparation for the next moisture measurement.

Large Size Speedy – Moisture Test Procedure



The test procedure is simple to follow and takes a just few minutes for most materials. To ensure accurate and consistent results the procedure should be followed precisely.

- 1. Clean the Speedy Vessel.** Prior to using the speedy tester ensure that the inside of the Speedy cap and vessel are empty and clean. Use the bristle brush to remove any residues from previous tests as shown.



- 2. Select and prepare the sample.** Ensure that the sample to be weighed and placed in the Speedy is representative of the material that is under investigation. Some materials, such as free-flowing powders and sands, need no preparation whereas others may need to be ground prior to testing or pulverised during the test – please refer to the Sample Preparation Table for further information.

- 3. Weigh the sample.** Place the empty measuring beaker on the electronic scale and zero the scale – Refer to the electronic balance user instructions for further details. Add small amounts of material from the sample until the correct sample weight is reached. The sample weight is determined by the size and measurement range of the Speedy that is being used as detailed below:



Part No.	Vessel Size	Measurement Range H ₂ O%W/W	Sample weight (g)
L2000C	Large	0 – 10	40g
L2000D	Large	0 – 20	20g
L2000G	Large	0 – 50	8g

- 4. Add the sample to the Speedy vessel.** Pour the sample into the chamber of the Speedy vessel as shown. Place pulverising balls into the chamber if required – refer to Sample Preparation Table.



- 5. Add the reagent to the Speedy cap.** Using the metal scoop, add a minimum of two full scoops of reagent to the Speedy cap cavity as shown.



- 6. Seal the Speedy.** Hold the Speedy horizontally and position the cap as shown. Swing the stirrup into position and tighten the top screw to seal.



7. **Mix the sample with the reagent.** Hold the Speedy vertically with the pressure gauge facing the ground and shake vigorously for 5 seconds. Rotate the Speedy through 180° so that the pressure gauge faces the sky, tap the sides of the Speedy to ensure the sample falls into the cap cavity and prop or hold the Speedy in this position for 1 – 2 minutes.

Alternatively, if the pulverising balls are being used, hold the Speedy horizontally and shake it in an orbital motion to make the balls spin around the inside of the Speedy vessel. Do this for 20 seconds and then rest for 20 seconds. Repeat this process two or three times. The spinning balls pulverise the sample to give a more reliable measurement.

8. **Take the reading.** Hold the Speedy horizontally and at eye level and take the moisture content reading directly from the pressure gauge.



9. **Release the pressure.** Hold the Speedy vertically with the pressure gauge facing the ground. Locate the arrow on the flange of the cap and point this away from yourself and other people in your vicinity. Unscrew the top screw slowly to vent the gas that may have been generated within the Speedy.



10. **Remove the sample and reagent.** Tip the contents of the Speedy directly into a clean and dry open container and dispose of in accordance with **Section 13** of the Calcium Carbide **Material Safety Data Sheet**.

11. **Clean the Speedy.** Clean the Speedy vessel and cap and measuring beaker in preparation for the next moisture measurement.

User Guidance Notes

Proportional Test Technique

If the moisture content of the material exceeds the measurement range of the Speedy being used then the Proportional Test Technique may be used to obtain measurements. This involves halving the normal sample weight and doubling the gauge value. For example:

Assume a L2000D Speedy with a measurement range of 0 – 20 H₂O%W/W is being used to test soil with a nominal moisture content of 30%. The sample is prepared as required and half the normal weight – 10g – is weighed and placed in the Speedy. The test procedure is followed and a gauge value of 14.7% is recorded. This value is then doubled to give the actual moisture content of 29.4%.

The proportional test may also be used to obtain clearer readings in very dry material by doubling the sample size and halving the gauge value.

Temperature

For optimum performance the Speedy tester and sample should be at 20°C (68°F) when used. If this is not practical, take at least three tests in quick succession to equilibrate temperatures as far as possible. Ignore the first and second test results and record the later results.

Correction Factors

When compared with oven test results, Speedy readings may be low if the material under investigation contains volatile components other than water as these may evaporate with the water at elevated temperatures. Correction factors for given materials can be established by plotting graphs of Speedy test results against oven test results.

Measuring Liquids

Speedy testers may be used to measure the moisture content of certain liquids (most commonly oils) by adapting the test procedure as follows:

1. Weigh the liquid sample as normal
2. Place the liquid in a clean mixing vessel and add two to four scoops of **dry** sand. Mix thoroughly and place the mixture in the Speedy vessel.
3. Continue with the test as detailed in the Moisture Test Procedure.

Wet Weight to Dry Weight Conversion

The pressure gauges used with the Series 2000 Speedy testers are calibrated to give the moisture content expressed as a percentage of the sample's wet weight. If required, the measured value (M_{WW}) can be expressed as a percentage of the sample's dry weight (M_{DW}) by using the following formula:

$$M_{DW} = \frac{100 \times M_{WW}}{100 - M_{WW}}$$

Fault Diagnosis

Suspect Low Reading

If gauge readings are lower than you expect or anticipate check the following:

1. Test procedure has not been followed correctly. Ensure correct sample weight is used. Ensure sample is placed in the Speedy vessel and reagent is placed in the Speedy cap. Ensure Speedy vessel and cap are united and sealed in the horizontal plain to prevent premature contact of reagent and sample.
2. Inadequate cleaning of Speedy vessel and cap between tests. Ensure all residues from previous tests have been removed from the cap and vessel before starting a new test.
3. Insufficient reagent. Repeat the test using an additional scoop of reagent.
4. Ineffective reagent. Ensure that the reagent is fresh. Note that the colour of fresh reagent is dark grey; ineffective reagent (that has been exposed to moisture in the air or other sources) will have turned light grey in colour.
5. Inadequate sample preparation or sample-reagent mixing. Consider grinding the sample prior to weighing and/or (for Large Speedy only) using pulverising balls.
6. Temperature effects. Low readings may be recorded if the Speedy is used in very low temperatures. Take numerous readings in quick succession to raise the operating temperature of the Speedy.
7. Pressure loss. Visually check the cap washer for signs of holes or leak paths. Remove pressure gauge and visually check pressure gauge washer. Visually check Speedy vessel and cap for hairline cracks.
8. Defective pressure gauge. Does the needle sweep smoothly across the scale plate? If not, replace the gauge, or return the Speedy tester to an authorised distributor for service.

Suspect High Reading

If gauge readings are higher than you expect or anticipate check the following:

1. Ensure correct sample weight is used.
2. Ensure Speedy is held in the horizontal plain at eye level when reading the pressure gauge.
3. Temperature effects. High readings may be recorded if the Speedy is used in very high temperatures. If the Speedy is warm/hot to touch as a result of taking many readings in quick succession, allow time for it to cool down before taking more tests.
4. Defective pressure gauge. Does the needle return to zero after releasing pressure from the Speedy? If not, replace the gauge, or return the Speedy tester to an authorised distributor for service.

Recommended Spares and Consumables

It may be wise to consider having the following spares and consumables to hand when using the Speedy tester, especially in remote locations:

Batteries for the electronic scale, 3-off AA/LR6 1.5V
 Speedy cap washer
 Pressure gauge washer
 Pressure gauge (note the measurement range)
 Cleaning brushes

Other spares parts for the Speedy vessel are available on request.

Sample Preparation Table

Material Type	Recommended Preparation
Aggregate	Check maximum sample size; crush if larger than maximum recommended particle size
Dust	None required
Liquids	Mix with dry sand – see User Guidance Notes
Powders	None required
Sand	None required
Soils	Grind with mortar and pestle prior to testing, or use pulverising balls. Refer to Large Size Speedy – Moisture Test Procedure

The information contained in this booklet is given in good faith. As the method of use of the instrument (and its accessories) and the interpretation of the readings are beyond the control of the manufacturers, they cannot accept responsibility for any loss, consequential or otherwise, resulting from its use.



GE Protimeter plc

Meter House, Fieldhouse Lane, Marlow, Bucks. SL7 1LW. England

Telephone: +44 (0) 1628 472722 Fax: +44 (0) 1628 474312

e-mail: protimeter@indsys.ge.com

Web Site: www.protimeter.com

GE Protimeter North America: Telephone: +1 800 321 4878

GE Protimeter GmbH: Telephone: +49 (0) 2129 37530

GE Protimeter Nordic: Telephone: +46 (0) 8718 3245

Appendix

Calcium Carbide – Material Safety Data Sheet

Ashworth Instrumentation Calibration Statement

GE Protimeter plc manufactures and calibrates instruments in accordance with certified ISO 9001 procedures. In accordance with these procedures, all new instruments are correctly calibrated when they leave the factory.

This certifies that the instrument specified below has been calibrated, tested and inspected in accordance with GE Protimeter ISO 9001 accredited quality procedures.

Calibration of the instrument was checked using reference pressure Gauge No. 11654027 that is in turn checked periodically against our certified Dead Weight Tester No. 10164/240.


This instrument is guaranteed for parts and labour, against manufacturing defects for 1-year from date of issue shown below

April 2004

Date of Issue

Speedy 2000 Tester

 Instrument



Trevor Knight

Signature

Name (printed)

For the Quality Assurance Dept